



# DVR

Multi-Room DVR

User Guide 1.0



**Blue Stream** 

## TABLE OF CONTENTS

### DVR Operating Instructions

Page 1 - 9

DVR Service – Watch your favorite television programs, movies and sports when it's convenient for you.

### Multi-Room DVR Operating Instructions

Page 10 - 18

Multi-Room DVR Service – Watch, record and delete programming on your DVR from up to four non-DVR digital client set-tops in your home.

10/2012

## Digital Video Recording (DVR) – Dual Tuner

Imagine...coming home to your own personal library of television programs, movies and sports that you can watch whenever it's convenient for you. It's TV on your schedule.

Pause live television! Rewind and replay programs so you don't miss a beat.

Record up to 90 hours\* of your favorite programs and view them as many times as you want, whenever you want. You can even record **High Definition TV\*\***. All without rentals, tapes or returns.

Your Dual Tuner DVR makes recording and watching your favorite programs easier than ever. Powered by **i-Guide**, now you can watch a program while recording another or record two programs at once! You have your own personal video library, stored on your digital set-top box, so you can watch them at your convenience. You can even **PAUSE, FAST FORWARD** and **REWIND** live TV to playback scenes you've missed.

### Control Live TV

Using your **DVR** and your Digital Cable Remote, you can control live TV. Anytime you tune to a channel, the **DVR** begins making a temporary recording of whatever you're watching. So you can **PAUSE** if the phone rings, **REWIND** or **INSTANT REPLAY** a scene you missed and **FAST FORWARD** to skip what you don't want to watch. Your **DVR** will record up to two hours of live TV\*\*.

The live TV recording is not a permanent recording, unless you actually save it to the **DVR's** hard drive. For live TV recordings, the temporary recording (buffer) will be erased if any of the following occur:

- Turn off your **DVR**.
- Change channels. Unless you use the **SWAP** function, your **DVR** will begin to store the new program and remove the previous program you were watching from the buffer. (See **SWAP** Section for more information.)
- Watch more than two hours of the same channel. After two hours (less for **HD** programs) the **DVR** removes the earlier minutes of the recording. Only the most recent two hours you have watched are kept in the buffer.

### Playback Controls

You can play back your video recordings using the Video Control Buttons.

 


These buttons function like VCR controls. Plus, you have new **DVR** control features, like **Instant Replay** and **SWAP**.

*Note: Some remotes are equipped with **Instant Replay**, **SWAP** and **LIVE** buttons.*

### Remote Control Arrow Buttons

The **▲▼◀▶** buttons on your remote control will control playback when you are watching a recording in progress or while watching a recorded program.

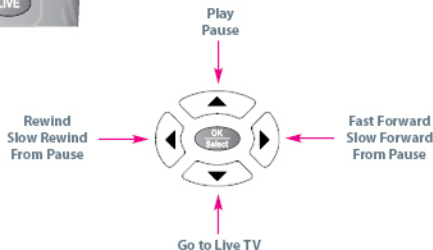

\*Recording capacity varies.

\*\*Recording buffer (temporary storage) for each tuner will record as long as you stay tuned to the same channel.

 

 
## Guide Symbols to Know – Recorded Program Information Screens

 Go back to the previous screen	 Delete the program from My Recordings
 Play the recording	 Change the Delete Priority*
 Start the recording from the beginning	 Place a Lock on the program to restrict viewing

### Status Bar



The **Status Bar** appears whenever you **PAUSE**, **REWIND** or **FAST FORWARD** a live program. It also gives you information such as the title of the program you are watching, the source of the program and duration of time. The yellow position bar indicates where you are in the program. Green indicates the length of the program you are watching. White indicates the the length of other programs available in the buffer. Red indicates that you are watching a recording in progress.

### Pause

As you watch live TV and recorded programs, press **PAUSE**  and the programming on your TV screen instantly freezes. No more missing the climactic scene of a movie or the winning play of the game! For programs you are watching live, your **DVR** will remain in pause for up to 90 minutes\*\*. Pressing **PAUSE**  more than once allows frame by frame viewing. Press **PLAY**  to resume normal play of the program from the point where it was paused.





### Rewind

Want to review a portion of your live show? It's a snap with **DVR**. Press **REWIND** . Press it again up to 4 times to increase the rewind speed. **REW2**, **REW3** and **REW4** will appear on-screen. Press **REWIND** a fifth time or press **PLAY**  to resume normal play.



### Fast Forward

For programs you are watching live, **FAST FORWARD** can be activated if you have paused or rewound the program. Press **FAST FORWARD**  to move forward in the program. Press it up to 4 times to increase the fast forward speed. **FF**, **FF2**, **FF3** and **FF4** will appear on-screen. Press **FAST FORWARD** a fifth time or press **PLAY**  to resume normal play.

*Note: You can only fast forward up to the point of live broadcast.*



\* **Delete Priority** is used to determine whether you delete the program or the program is deleted automatically when space is needed.

\*\* Pause capacity depends on video format; less than two hours for **High Definition** programming.

### Slow Motion

Your **DVR** is equipped with slow-forward and slow-rewind functions to give you crisp and clear **Slow Motion** images. Ever wonder what the referees are looking at when they review a controversial play? Use **Slow Motion** to get an inside look. To activate slow-forward, press **PAUSE** (II) and then **FAST FORWARD** (⏩). To use slow-rewind, press **PAUSE** (II) and then **REWIND** (⏪). To return to regular speed, press **PLAY**.



### Instant Replay

With **Instant Replay**<sup>®</sup>, you can go back to see the last play of the game or replay the last scene of your movie. Just press the (⏮) button on your remote or **PAGE** (◀) on your remote to replay the last 15 seconds. Press the (⏮) button on your remote or **PAGE** (◀) repeatedly to continue skipping back in 15-second increments.



### Return to Live TV

When you pause or rewind a live program, the show continues to be broadcast in real time. To return to the live show, press the arrow (▼) button\* or **LIVE** button\*.

### SWAP Between Two Programs

Because your **DVR** has two tuners, it can buffer (temporarily record) two programs at the same time – one on each tuner. The **SWAP** feature lets you toggle back and forth between the two live shows while giving you full control of both.

- While you are tuned to a program, press the **SWAP** button on your remote. You will change tuners.
- Now you can select an alternate program by changing channels or using the guide.
- Press **SWAP** again to toggle between the two programs.
- When recording two programs at the same time, on-screen prompts will ask if you wish to swap tuners. Select your desired recording preference.

*Note: The **SWAP** button is the key to keeping the buffer for both programs. If you change channels without using **SWAP**, you will lose the buffer.*

**Guide Tip** **Using Parental Locks With DVR** - You can restrict viewing of recorded programs, just like any other program. If you schedule a recording for a program you have **Locked**, the program will be recorded, however, audio is muted and no video will appear while the program is recording. A restricted notice remains on-screen allowing you to enter your **PIN** to view the program during recording. Once the program has been recorded, you can access it from your list of recorded programs. Just enter your **PIN** to view it.

### Personal Video Library

Using your **DVR** with **i-Guide**, you can build your own personal library of programs, movies, sports... whatever you want. Your recordings are stored on the **DVR** under **My Recordings** in the **DVR Menu**. Follow the steps below to begin building your personal video selection.

### Building Your Library - Recording Programs

Set and schedule recordings three ways with **i-Guide**:

- From Your Remote
- From Program Information
- Schedule Manually

\* Some remotes are equipped with **Instant Replay** and **LIVE** buttons.

## From Your Remote – One-Touch Record

Press **RECORD** anytime while watching TV or navigating through the guide to begin recording the current program immediately. You can also schedule recordings for programs starting later by pressing **RECORD** while in the Listings, and recording will begin at the program's scheduled start time.



## From Program Information

From the Listings, highlight a program and press **INFO**. Highlight and select **OK/Select** to start recording at the scheduled start time.



## Manual Recording

You can set a Manual Recording to record a specific time or channel.

- Select **DVR** from the **Main Menu** or **MY DVR\*** button, then select Set a Recording
- Select the start and end times and day and confirm your settings.
- Select the channel to record from the channel list.
- Select Create a Recording to confirm your settings or select Recording Options for additional options.



## View Programs Stored in Your Personal Video Library

From the **DVR Menu**, select **My Recordings**. Use the **↔** buttons on your remote to search through and highlight titles from your list of recorded programs. Press **OK/Select** or **INFO** to select the program.

- From the information screen, select **▶** icon to resume play from where you left off or select **⏮** icon to restart from the beginning.
- To control playback while watching a recorded program, use either the Video Control Buttons or the arrow buttons on your remote. (See the "Playback Control" section of this manual for more information.)



## Record Two Programs at Once

The Dual Tuner **DVR** allows you to set recordings for two different programs that air at the same time. While recording two programs, you can watch and control either program up to the point of live TV by using the **SWAP** button on your remote. There are several ways to record two programs at once. Here are two basic examples:

## While Watching a Show Currently Airing

- Press **RECORD** to record the program you are watching.
- Press **SWAP** to switch to the other tuner and find the second program you want to record.
- Press **RECORD** when you locate the second program you want to record.

(continued on next page)

\*My DVR button not available on all remotes. You can access the **DVR Sub-Menu** through the **DVR** button on **Quick Menu**.

## From the Guide

- Highlight a program you want to record from any listings screen.
- Press **RECORD** to set up the first recording.
- Highlight the second program.
- Press **RECORD** to set up the second recording.

## DVR Clipping

**i-Guide** provides a feature to accommodate recording two overlapping programs. With **DVR Clipping**, **i-Guide** will automatically clip the beginning of a program if there is a recording overlap when both tuners are in use. For example, while watching live TV, a scheduled recorded program ends at 9:05, but your second recorded program is scheduled to begin at 9:00; the second program will be "clipped" so that your first program is recorded in full. Clipping happens when both tuners are in use during the recording time. If this occurs, a "clipped" notice will appear next to those programs in the **My Recordings** listings. You can also check for clipping of scheduled recordings by going to **Future Recordings** in the **DVR Menu**. **DVR Clipping** can be turned on or off in the **Guide Setup Menu**.



## Record a Series

Your **DVR** lets you record multiple episodes of a program according to your preferences.

- Select the episode type to record, such as first-run only or all episodes.
- Specify how many recordings to save.
- Specify how long to save the recording – until you erase it or until space is needed.
- To access advanced series setup features, like add minutes to the start and end times and specify which channels to record, select the **Recording Options** icon to review all options.



Your **Series Recordings** will appear in the **My Recordings** list with the show title as its label. Multiple recordings of the same show will have the same label and will be listed beginning with the most recent recordings first as default. To change your view, use the **View** button on your remote to View by Date, View by Channel or View by Title.

You may also modify the priority assigned to a series using the **Series Priority List**. (See next section.)

## Modify the Series Priority List

If there are scheduling conflicts in your series recordings, your **DVR** automatically creates a Series Priority List. The first series you set to record has the highest priority and will be the one recorded if there is a conflict. You can easily change the recording priority of the series so that the series of your choice are recorded when a conflict exists.

- Select **DVR** from the **Quick Menu** or **Main Menu**
- Choose **Series Recordings**
- Highlight a program and use the **Page** **▲ ▼** arrows to modify priority



Note: If you want to record two series recordings instead of an individual recording that airs at the same time, you must delete the individual recording from the **Scheduled Recordings List** (See View List of Scheduled Recordings section to cancel a recording).

## Manage Schedule Conflicts

 
If you schedule more than two recordings for the same time, you will see a **Scheduling Conflict** screen that allows you to choose between a previously set recording and the new recording that is conflicting. Individual recordings always take priority over series recordings when there are scheduling conflicts. In case of a scheduling conflict between two series programs, additional icons will appear at the bottom of the **Scheduling Conflict** screen to help you determine which program to record.



## Manage Series Priority List

- Return to the previous screen.**
- Record new program or series as shown.**
- HIGH** **Show conflicts when the new series is a high priority.**
- LOW** **Show conflicts when the new series is a low priority.**
- Don't record new program or series.**

- To give your new recording the highest scheduling priority and to capture the most number of episodes for your new recording, select **High**. The screen will show you how many episodes of the new series will be recorded and which episodes of the old series will not be recorded because of the conflict.
- To move the new series back to the bottom of the scheduling priority list, select **Low** and the screen will refresh and give you revised results.
- Select the **Record** icon to confirm your new settings.

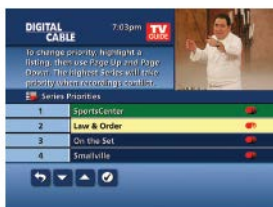

## View List of Scheduled Recordings

- From the **Main Menu** or **Quick Menu**, select **DVR\***.
- Select **Future Recordings**.
- See a list of all the programs you have scheduled to record.
- Select a title to cancel the **Scheduled Recording** or modify **Recording Options**.



\* Menu label may vary.

## Manage Your Personal Video Library

A recorded program remains in your personal video library until you decide to delete it unless you have it set to delete when space is needed. Your **DVR** will record and store up to 90 hours of standard definition programming and up to 20 hours of **High Definition** programming\*. There are several options for making the most efficient use of **DVR** storage space:

### To Delete Recordings

From a Recorded Program Information screen, select the **X** Icon to delete the recording. Select the **O** Icon to modify the **Delete Priority**, which gives you additional options such as deleting the recording when space is needed.

### Copy Recordings to a VCR or DVD

After you watch a recording, decide to either erase it or keep it permanently by transferring it to a VCR or DVD.

When you copy recordings to a VCR or DVD, make sure that the recording is displayed on the TV screen for the entire time the recording is being copied. If you change channels or display guide screens during the copying process, your tape copy will contain these images and you may not have a complete copy of the recording.

1. Connect the **RCA Jacks** connection on the back of the **DVR** to your VCR or DVD Video In.
2. Put a tape in your VCR or DVD in your DVD recorder.
3. Access your list of **Recorded Programs**.
4. Highlight a program from your list and press **OK/Select** or **INFO** to select the recorded program you want transferred.
5. From the Information Screen, select **K** to restart from the beginning.
6. Start recording on the VCR or DVD when playback begins.
7. As the recording plays, it is copied to your VCR or DVD.

*Note: Refer to your VCR or DVD User Manual for specific instructions.*

### Recording Low and Full Notices

 
To help you manage your personal video library, **i-Guide** will advise you with an on-screen notice when the available memory gets low or full.

If recording space becomes full during a recording, the recording will stop. Make sure you have enough recording space to record the entire program before you begin to avoid missing part of the program.

## Modify Recording Options

**i-Guide** gives you flexibility to manage your personal video library. You can change your **Recording Options** at any time, as often as you like.


From the **Main Menu** or **Quick Menu** or from **MY DVR** on the remote Select **DVR**, then select **Future Recordings** to see a list of your **Scheduled Recordings**. Highlight a program title and press **OK/Select** or **INFO**.

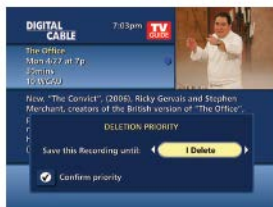

\* Recording HD programing requires a DVR connection to a HD television.



 Select the **TV** Icon from the Program Information Screen. Select the **TV** Icon to change the **Recording Options** or select the **X** Icon to delete this program from your list of **Future Recordings**.

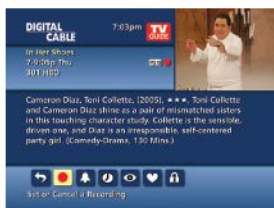

Use the **▲ ▼ ◀ ▶** buttons on your remote to change **Recording Options**:

- Change the frequency of the recording, such as every day or once a week.
- Specify how many recordings to save.
- Set a **Save Until** parameter, either until you delete or delete automatically when space is needed.
- Change the start and end times in order to catch every minute of a program, even if it runs over.

### From Listings

Select your **Scheduled Recording** in the listings; it will be indicated by the red dot in the **Instant Info**.

Press **OK/Select** or **INFO** and select the **TV** Icon to change your options or delete the **Scheduled Recording**.



From here, select **TV** Icon to cancel the recording, or select **TV** Icon to see all the **Recording Options**.



### Recording Notices

#### Recording Starting Notice

Before a **Scheduled Recording** begins, a notice will appear on-screen giving you the opportunity to confirm or cancel the **Scheduled Recording**. If you don't do anything when the recording is scheduled to start, the **DVR** will automatically tune to the channel and begin recording. Live TV programming that has been temporarily recorded will be erased once the **Scheduled Recording** starts.



#### Recording Stopped Notice

Changing the channel during a recording will stop the recording. You will see a notice confirming whether you want to stop the recording and change channels or continue recording. You can **SWAP** to watch live TV while continuing a current recording. (See **SWAP** section of this manual for more information.)

#### Swap Icon on Stop Recording Notice

The **SWAP** **TV** Icon will appear on the **Stop Recording Notice** screen if you attempt to change the channel while both tuners are recording.

- Select the **TV** Icon and press **OK/Select** to **SWAP** to view another channel on the other tuner.
- Select the **TV** Icon and press **OK/Select** to stop the recording and change the channel.





#### Guide Tip

**DVR** is not a long-term storage device. To maximize your storage space, review the contents of your library regularly and discard the recordings you no longer wish to save. See "Managing Your Personal Video Library" in this manual.



## Easy Steps to Use the Features of Your DVR

### How Do I Record a Program?

You can set a recording with just one touch of the remote.

- While in the **Guide**, highlight the program you wish to record and press **Record**  .  
A red dot appears in the **Program Information** window to indicate the program will be recorded.
- While watching live TV, simply press **Record**  . A **Recording Started** notice appears to indicate recording has begun.

### How Do I Record a Series?

1. Highlight the TV series you want to record in the **Guide** and press **Record**  twice to view the **Overlay** screen.
2. Select the **Create a Series Recording** icon and specify your recording options such as the type of episode you want to record and how many episodes you want to save.
3. Select **Record**  to record the series with these options.



### How Do I Watch a Recording?

Select **DVR** from the quick menu. Select **My Recordings** to view a list of your recorded programs. Highlight a program and press **OK/SELECT**. Select the **Play**  icon.





### How Do I View a List of Programs Scheduled to Record?

1. Select **DVR** from the **Quick Menu**.
2. Select **DVR Schedule**.
3. Select **Scheduled Recordings**.

### How Do I Pause, Rewind, and Instantly Replay Live TV?

Press **Pause**  , **Rewind**  , or **Instant Replay** on the remote.

### How Do I Play in Slow-Motion?

Press **Pause**  , then press **Fast-Forward**  to view slow-motion in forward mode. Or press **Pause**  , then press **Rewind**  to view slow-motion in reverse mode.


### How Do I Return to Live TV?

Press **Live** on your remote.

### How Do I Control Two Programs at Once?

Use the **Swap** button to toggle back and forth between two programs. This allows you to pause, rewind, and fast-forward both programs.

### How Do I Start a Recording Early or Extend the End Time?

1. Select a program from your list of **Scheduled Recordings**.
2. Select the **Recording Options**  icon.
3. Arrow down to adjust the start and end times.

### How Do I Modify My Series Priority List?

1. Select **DVR** from the **Quick Menu**.
2. Select **Series Priority List**.
3. Highlight a listing using **Page +/-** to modify the priorities.

### Important Notes About Your DVR

- DVR is set to save programs until "Space is needed." You can change the delete priority to "I Delete" for all programs or for individual programs
- You can easily determine how much disk space is available by accessing DVR Recordings. The blue bar indicates how much disk space is occupied.
- Parental Locks will not prevent a program from recording. However, the audio is muted and no video appears while it records.
- You cannot record ON DEMAND programs.
- Pay Per View broadcasts must be recorded manually with One Touch Recording; you cannot schedule automatic recording in advance.

# Welcome to the **Multi-Room DVR** experience!

With multi-room DVR you will be able to watch, record and delete programming on your Digital Video Recorder (DVR) from up to four non-DVR digital client set-tops in your home. You can also use the powerful new bookmarking capabilities which allow you to resume watching the same program in another room from exactly where you left off. This guide gives you an overview of how to quickly get started enjoying this exciting new addition to your home entertainment system\*.

\* Operation of your Digital Video Recorder set-top remains unchanged. This guide details how to operate your home's non-DVR set-tops in order to enjoy the Multi-Room DVR features such as playback, recording and bookmarking of programs from any room in your house. For details on how to operate your Digital Video Recorder, please refer to your DVR Guide or contact your cable provider.



## Accessing Your DVR Content Using Multi-Room DVR



Press the **My DVR** button on your cable remote to launch the Multi-Room DVR feature and display the **My Recordings** screen\*.

\* Remote button selections may vary depending on the services your cable provider offers.



Press **My DVR** Button to launch Multi-Room DVR

## My Recordings Screen

The **My Recordings** screen provides a listing of all your existing recorded programs and in-progress recordings. The program series recordings are automatically placed in folders to allow you to quickly find your favorite episodes. Select the folder to view one or more series recordings on your DVR.

Use the left and right arrow keys on the remote to sort the list by time, channel, or date.

Use the up and down arrow keys to scroll through the list. When the recording you want to watch is highlighted, press the **OK** button on the remote to see the recording details on the **Playback Details** screen.



## Playback Details Screen

The **Playback Details** screen gives you a description of the recorded program and offers the following playback options:



### **Watch a recording from where you left off**

Select the **Resume playback** icon on the screen to see a menu of playback options.



### **Watch a recording from the beginning**

Select the **Play from beginning** icon on the screen to start watching the recording from the beginning.



### **Delete a recording**

Select the **Delete recording** icon on the screen to erase the recording from your DVR.



## Resume Playback From:

The Resume Playback From: menu offers you the following playback options:



Choose **This room's latest position** to watch from where playback was stopped on this room's **non-DVR client set-top**.



Choose **Master Bedroom's latest position** to watch from where playback was stopped in the room where your DVR is located. (Master Bedroom in this example is the friendly name you assigned to your home's master DVR.)



Choose **Follow-me bookmark position** to watch from where playback was bookmarked on another room's non-DVR set-top.



## Watch a Recording

A progress **Status Bar** is displayed during playback of a recording that shows the program name, program duration, as well as how far you are currently into the playback.



While watching a recording you can also use your remote to fast forward, rewind, pause, or stop the program.



## Main Menu on Client Set-Top

You can access the **Main Menu** by pressing the **My DVR** button and the **Menu** button on the remote at any time the MR-DVR application is running. The options presented will vary depending on the screen or function the user is interacting with. The image below shows the options available from the **My Recordings** screen. Additional options (see list below) are available when accessing the **Main Menu** during Playback.







Use the left and right arrow keys on the remote to navigate the Main Menu options.

Press the **OK / Select** button on your remote to select the menu option.



### Menu Options on Client Set-Top

-  **Pause** – Pause Live TV on a non-DVR client set-top. This feature enables you to pause the Live TV content you were viewing prior to launching the DVR application on the remote cable box.
-  **View Playback Details** – Takes you to the **Playback Details** screen.
-  **Delete Recording** – Deletes the selected recording.
-  **Schedule New Recording** – Takes you to the **Schedule a Recording** screen where you can set up future recordings.

### Menu Options (continued)

-  **View Scheduled Recordings** – Opens the **Future Recording** screen that displays a list of programs you have already scheduled to record.
-  **Set Follow-me Bookmark** – Bookmarks the recording you are currently watching for playback at the same place from any other connected set-top in the home. **Note:** This function is available by pressing the **MENU** button during the playback of a recording.
-  **View Hub List** – Takes you to the **Hub** screen which displays the Digital Video Recorders (Hub) you have in your home. You can also assign a friendly name the DVR in your home from this screen.

## Pause Live-TV

This function is only available from the **My Recordings** screen (see page 11 for more information). Use one of the following options:



Press **PAUSE** button on the menu bar.



Press **PAUSE** button on the remote.

Please note that the **PAUSE** function on your non-DVR set-top is slightly different than on your DVR. In some instances, the **PAUSE** function will not work if other set-tops in your home are already performing a record function.



## Set a Follow-me Bookmark

The **Follow-me Bookmark** option allows you to set a bookmark during playback of a recording and resume that recording from that same bookmark in another location in the home.

While watching a recorded program, press the **MENU** button on your remote. Select the **Set Follow-me Bookmark** icon on the menu. Press the **OK** button on your remote to bookmark the current viewing location.

You will see a **Follow-me Bookmark Successfully Set** confirmation message.

You can now retrieve this bookmark to resume playback of the recording from this point at any other connected non-DVR set-top in your home.



## Schedule a Recording from a client set-top



Press the **My DVR** button and then the **Menu** button on your remote. Select the Schedule Recording icon on the menu and press the **OK** button on your remote.

On the **Schedule a Recording** screen, use the up and down and arrows on the remote to select the **Channel**, **Date**, **Adjust time by**, and **What's in-progress at**: fields. Use the left and right arrow keys to scroll through these fields to locate and select the program you want to record. The title and a description of the show you select will appear in the **Program** field.

Once you have set up your recording, select the **Rec Program** icon and press the **OK** button on your remote to schedule the recording. A **Record Request Succeeded** message will display. You can also select the **Rec Series** icon to schedule multiple episodes of a program to be recorded.



## Delete a Recording

In the **My Recordings** screen, use the up and down arrow keys on the remote to select and highlight the recording you want to delete.



Press the **MENU** button on your remote to display the **Main Menu**. Use your arrow key to select the **Delete Recording** icon. Press the **OK** or **Select** button on the remote to delete the recording.

At the **Press "OK" to Confirm Delete...** confirmation message, press the **OK** button on the remote. The recording is now deleted.

Recordings can also be deleted from the **Playback Details** screen.





## Cancel a Future Recording

Select **View Scheduled Recordings** from the **Main Menu**. In the **Future Recording** screen, use the up and down arrow keys on your remote to select and highlight the future recording you want to delete.



Press the **MENU** button on your remote to display the **Main Menu**. Use your arrow key to select the **Cancel Recording** icon. Press the **OK** or **Select** button on your remote to delete the future recording.

At the **Press "OK" to Confirm Cancel...** confirmation message, press the **OK** button on your remote. The recording is now deleted.



## View DVR Hub/Change DVR Hub Name



Select **View Hub List** from the **Main Menu** to view the Digital Video Recorder in your home.

You can use this screen to change the name of the DVR Hub in your home. Press the **MENU** button on your remote from this screen and then enter the name.



## Helpful Hints — Resuming Playback Using Bookmarks

MR-DVR bookmarks your DVR content letting you to resume playback of the video content (movies, television shows, etc.) at a later time from the same, or different room of your home. Let's look at a few examples:

### Resuming playback from the same room.

Let's assume you want to finish watching a movie in your upstairs bedroom. Previously, you stopped playback by pressing the **STOP** button on your remote. To resume playback you:

1. Press the **My DVR** button on your remote to display the **My Recordings** screen.
2. Use the arrow keys to select the content you want to resume.
3. Select the **Resume playback** icon.
4. Select **This room's latest position** and press **OK**. The playback will resume right where you left off.

 


### Resuming playback on a connected non-DVR set-top that was previously playing on your DVR.

Let's assume you are watching a movie in your living room (where the DVR is located) and you decide you want to continue watching it in the den (where one of your connected non-DVR set-top's is located). Here is what you would do:

1. Press the **PAUSE** or **STOP** button to stop/pause playback on the DVR.
2. In the den, press the **My DVR** button on the remote to display the **My Recordings** screen.
3. Select the content you were previously watching in the living room and select the **Resume playback** icon.
4. Select the **Living Room's latest position** option\*. The playback will resume right where you left off.

*\*Note: In this example, Living Room is the friendly name you assigned to your home's master DVR.*

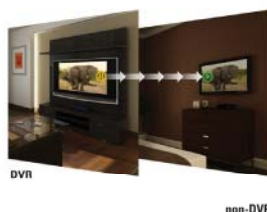

## Resuming playback on a connected non-DVR set-top that was previously playing on another non-DVR set-top.

Let's assume you are watching a movie on a non-DVR set-top in your bedroom and you decide you want to continue watching it in the den (where another non-DVR set-top is located). Here is what you would do:

1. While watching the content in the bedroom, press the **MENU** button on the remote control. Select the **Set Follow-me bookmark** icon and press **OK**.
2. In the den, press the **My DVR** button to display the **My Recordings** screen.
3. Use the arrow keys on your remote control to highlight the content you were previously watching in the bedroom and press **OK**.
4. Select the **Resume Playback** icon from the Playback Details Screen.
5. Select the **Follow-me bookmark position** icon and press **OK**.
6. The playback will resume right where you left off.



## Pausing live TV on your non-DVR set-top.

Let's assume you are viewing live TV and decide to resume watching at a later time. Here is what you would do:

Press the **My DVR** button on your remote to display the **My Recordings** screen.

Press the **PAUSE** button on your remote.

To resume watching press the **PLAY** button on the remote.

*Note: If your DVR is busy with other record functions, a confirmation screen will appear when you try and pause live-TV or set-up a recording from a connected non-DVR set-top. Should you chose to continue (by pressing OK) a viewer watching TV at the DVR will experience an interruption in program viewing.*





**Blue Stream** 